

AC300 Economy Door or Window Cover Installation Instructions

Unpack and review parts



Center header over a door or window along a level line and mark screw holes.



Drill holes for wood screws.




Bend left end panel at the notch.



Attach wing circle with 2 bolts and nuts.



Repeat with right end panel.

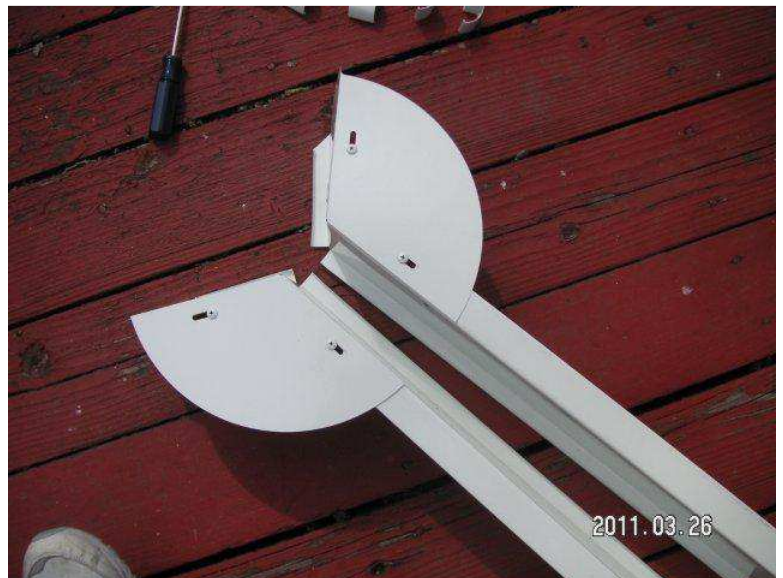

Attach left end panel to end of header with bolt and nut.




Repeat with right end panel.




Your assembly should now look like this:



Use bolt and nut to attach left end of runner to underside of left end panel.

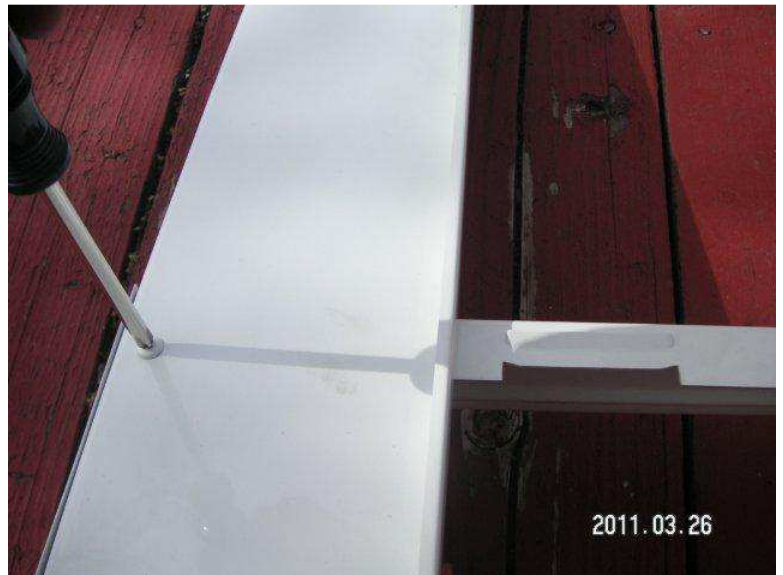

Repeat with right end of runner.

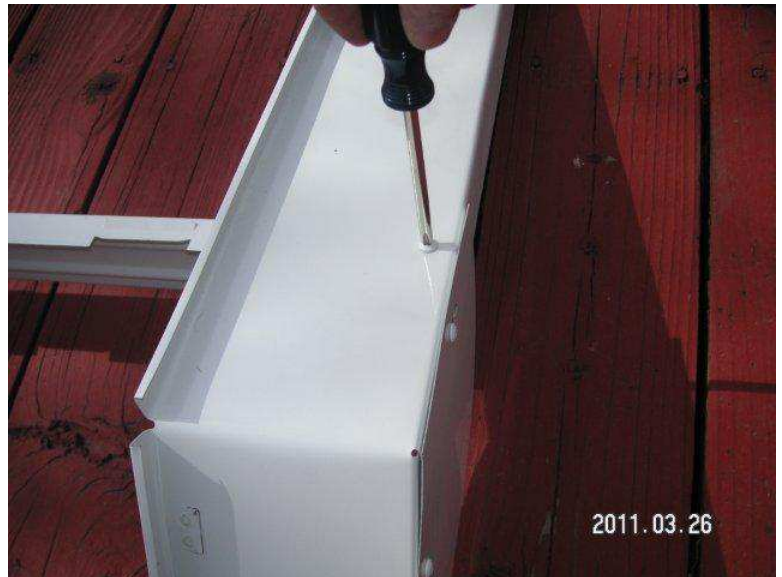

Use bolts and nuts to attach ends of bottom panels to underside of header.



Your assembly should now look like this with valance ends of bottom panels bent:



Slide all clips into slots on runner and lock.



Each clip must engage bottom runner on each side.



Hold assembly against the wall and fasten header with wood screws. Caulk between header and wall to insure water tightness.



Drill a hole (11/64" bit) in the underside of runner for each of the left and right end rods and attach each end rod to underside of runner with a bolt and nut.



Attach end rods to wall with wood screws. Awning angle may be adjusted by sliding end rods up and down the wall.






Your assembly should now look like this:



Bend top panels to proper angle.

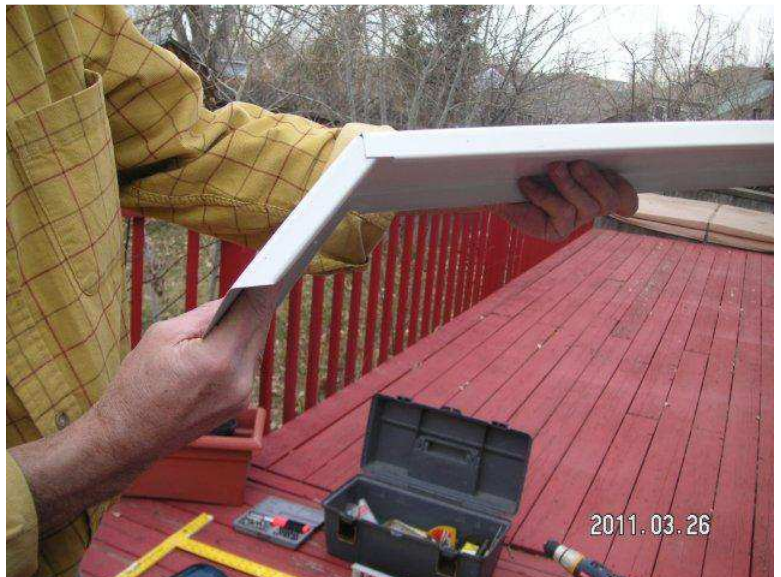

Slide top panels on top of gaps between bottom panels.



Lock top panels with clips.



Lock valance parts of top panels using slots in bottom panels.



Assembled awning.



www.GeneralAwnings.com

1-888-768-8404