


Aurora Series Door or Window Canopy with Steel Brackets Assembly and Installation Instructions

Be sure to use safety glasses when assembling and installing the awning. Some metal parts may have sharp edges. Use work gloves to handle them. You will need a helper to install this canopy.

These instructions are available online at <http://www.generalawnings.com/instructions>. Please read the instructions carefully before proceeding with installation. Select wall anchors appropriate for your siding and wall construction, which may not be the wall anchors included in your canopy kit. Make sure that the awning is attached to structural framing. Depending on the mounting surface and the location of structural framing members, a ledger board may be required.

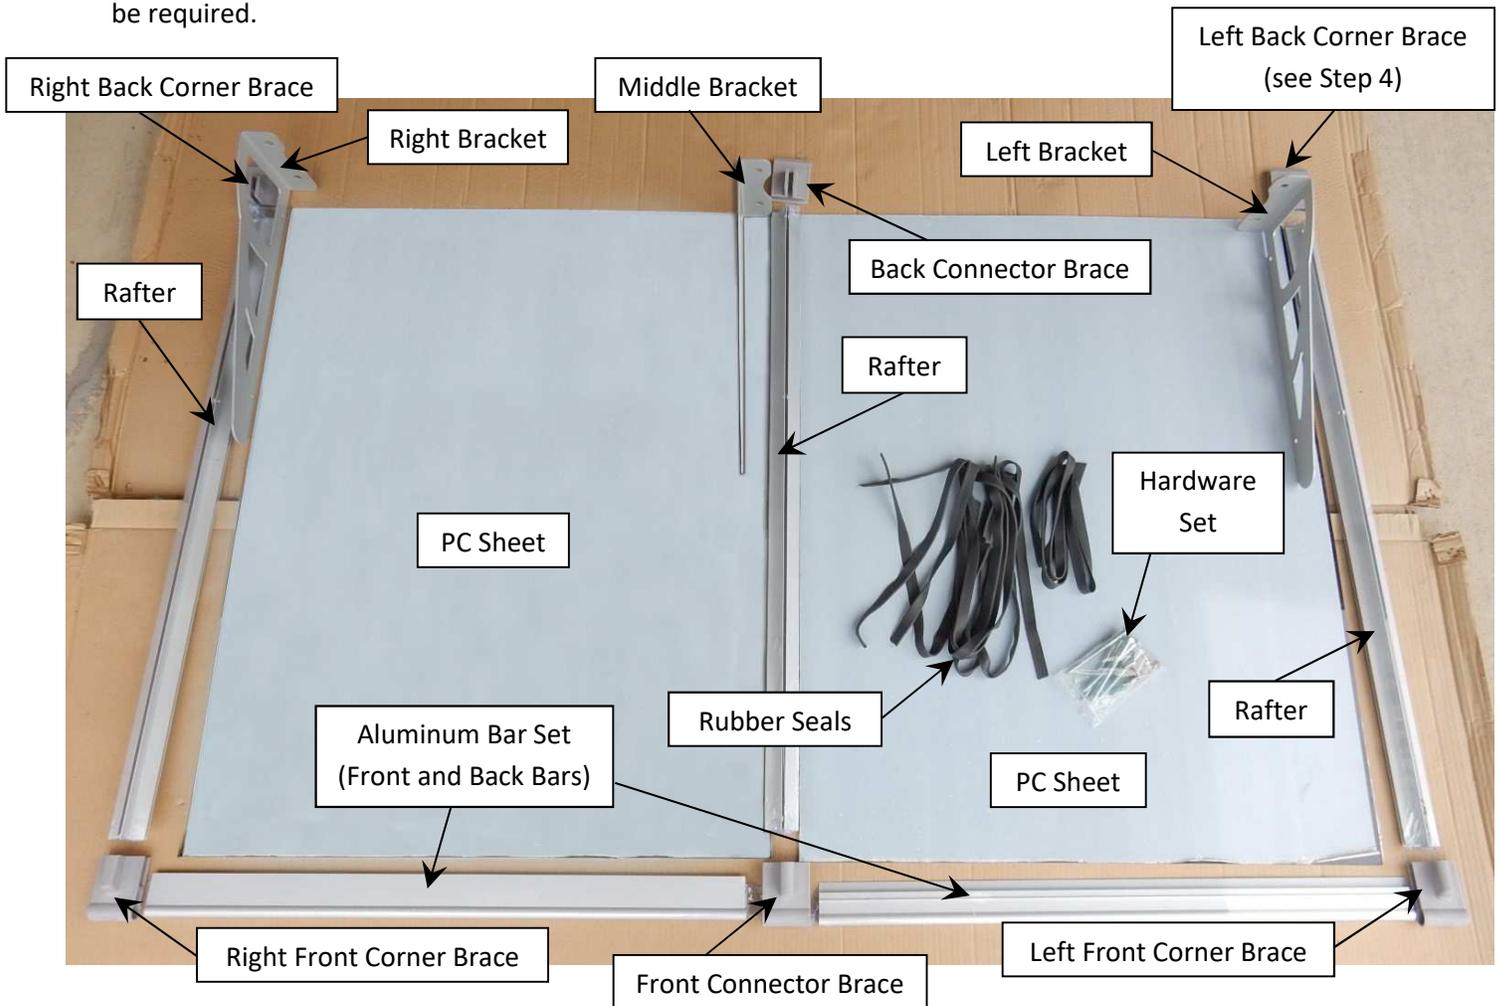


1. Arrange canopy parts to become acquainted with them. The above photo shows a canopy with 2 PC Sheets and 3 Brackets. Your canopy may have more or fewer PC Sheets and Brackets. Note that Bracket and Corner Brace names (left of right) are designated for viewing at the installed canopy from the outside in. The Middle Bracket can be either left or right. Corner Braces have slots to insert Aluminum Bars on only one side, Connector Braces have such slots on both sides.



2. Check the contents of the Hardware Set. This photo shows the parts for the canopy in Step 1.




3. Peel the protective film back from the PC Sheet edges by 1-2 inches and install 4 Rubber Seals.

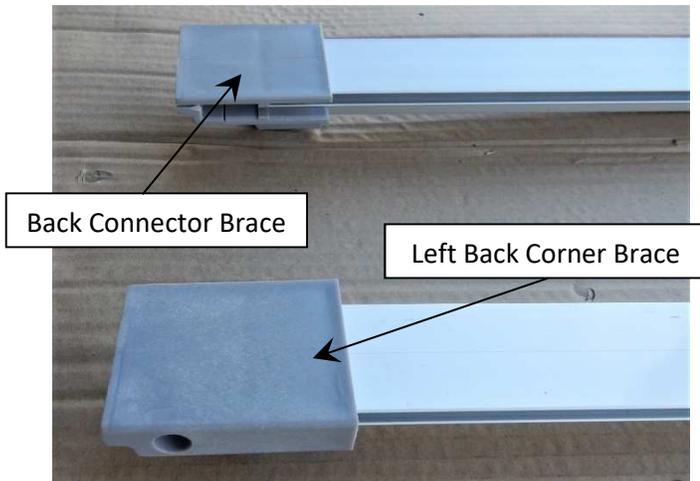

Back Connector Brace

Left Back Corner Brace

4. Install the Left Back Corner Brace and the Back Connector Brace on 2 Rafters.

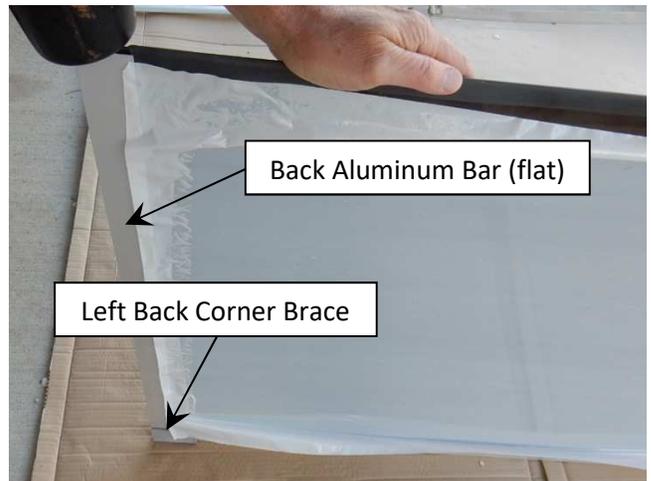


Back Aluminum Bar (flat)

Left Back Corner Brace

5. Install the Rafter with the Left Back Corner Brace on the PC Sheet, then drive in the Back Aluminum Bar using a rubber mallet.



6. Install the Rafter with the Back Connector Brace.

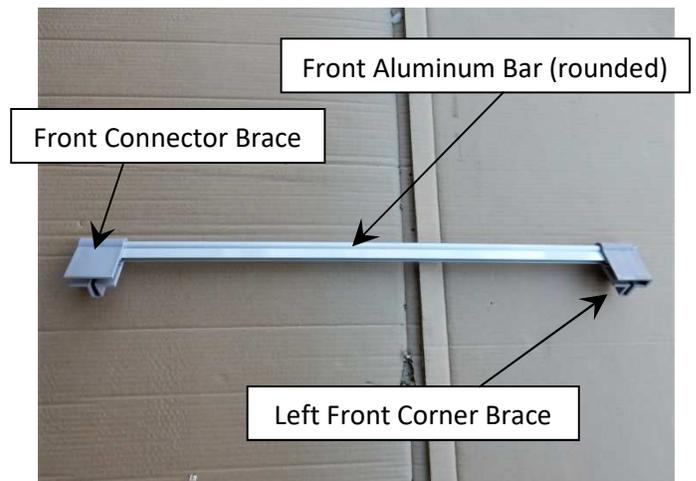

Front Aluminum Bar (rounded)

Front Connector Brace

Left Front Corner Brace

7. Install the Front Connector Brace and the Left Front Corner Brace onto the Front Aluminum Bar.




8. Install the Front Aluminum Bar with the two Braces onto the PC Sheet.




9. Drive a Small Screw into both ends of the Back and Front Aluminum Bars through the holes in the Corner Braces and Connector Braces.



10. Install the Left Bracket using the longer bolt with a nut and washer in the back and a shorter bolt with a nut and washer in the front.

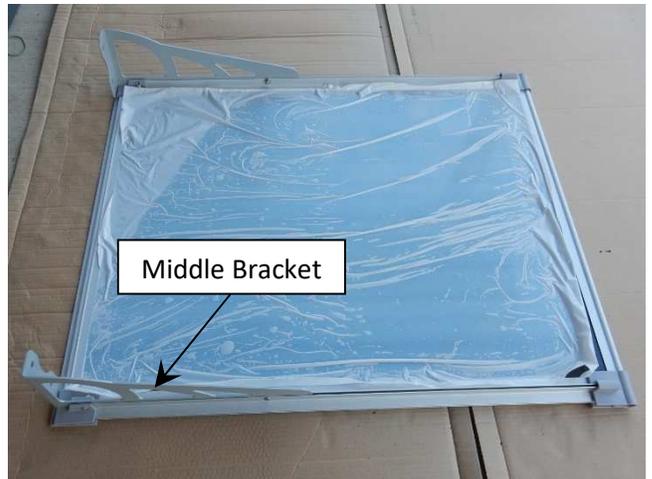

11. Install the Middle Bracket (the Middle Bracket can be either left or right).

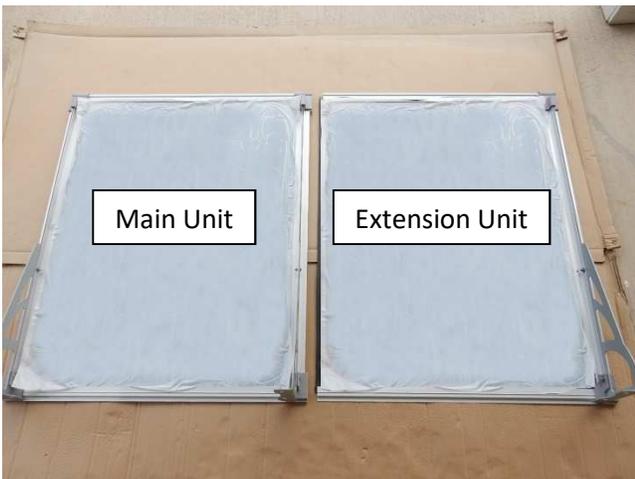

12. Assemble the Extension Unit. It has a Bracket and a Rafter on only one side.




13. Connect the Main Unit with the Extension Unit and measure the distances between the Bracket mounting holes.




14. Mark the mounting holes and install the Main Unit on the wall using appropriate wall anchors.



15. Attach the Extension Unit to the Main Unit and secure to the wall using appropriate wall anchors.

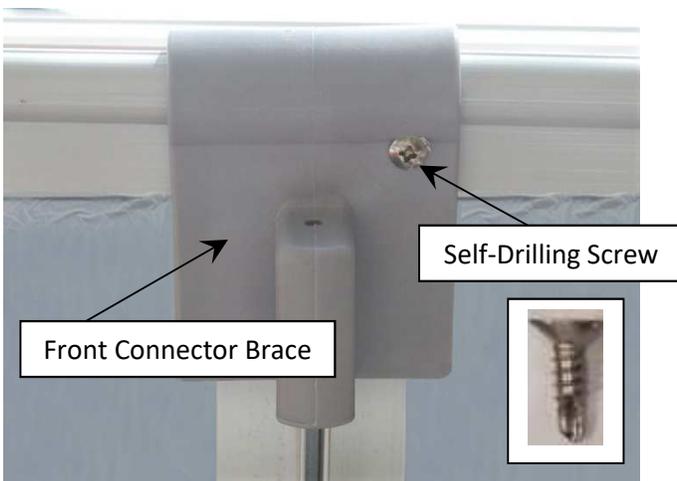

16. Use a self-drilling screw to secure the Front Aluminum Bar of the Extension Unit in the Front Connector Brace.

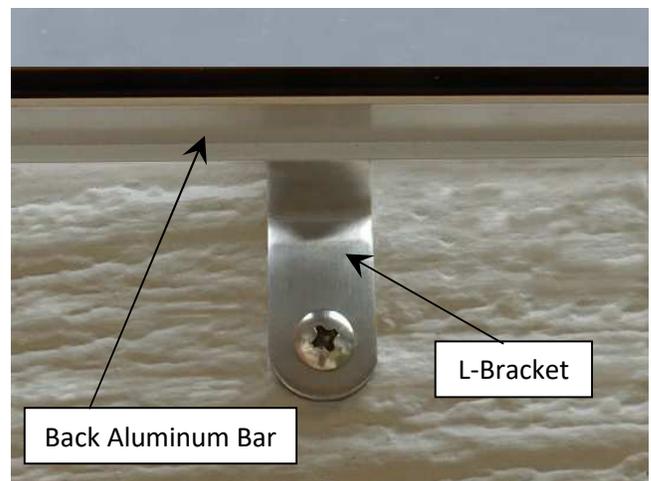

17. Install an L-Bracket under the center of each Back Aluminum Bar for an additional support.



18. Remove the protective film from the PC Sheets. This concludes the installation.

Aurora Canopy Parts List

Complete (Main) 32" Unit

Frame

1 x Left Bracket

1 x Right Bracket

1 x Front Corner Brace, Left

1 x Front Corner Brace, Right

1 x Back Corner Brace, Left

1 x Back Corner Brace, Right

1 x Back Bar Center Support (L-Bracket) with 2 screws

1 x Rubber Seal Set - for 4mm sheet

1 x Hardware Set (4 x lag screw, 2 x long bolt with nut and washer, 2 x short bolt with nut and washer), 4 x small screw)

Instructions

Carton (inner box, 36 x 15 x 4.5cm)

Added separately

2 x Rafter

1 x Aluminum Bar Set (front and back aluminum bars)

1 x PC Sheet

30" Extension Unit

Frame

1 x Left or Right Bracket

1 x Front Connector Brace

1 x Back Connector Brace

1 x Back Bar Center Support (L-Bracket) with 2 screws

1 x Rubber Seal Set - for 4mm sheet

1 x Hardware Set (2 x lag screw, 1 x long bolt with nut and washer, 1 x short bolt with nut and washer), 2 x small screw, 1 x self-drilling screw)

Carton (inner box, 36 x 15 x 4.5cm)

Added separately

1 x Rafter

1 x Aluminum Bar Set (front and back aluminum bars)

1 x PC Sheet