

Brookside Awning with Flat Side Panels Assembly Instructions


Unpack and review parts.



Spread right-side rafter assembly open and lay on a flat surface.



Insert the smallest right-side louver into the curl of the rafter, align holes in the louver with holes in the rafter assembly and fasten with two #8 x 3/4" Tek screws.

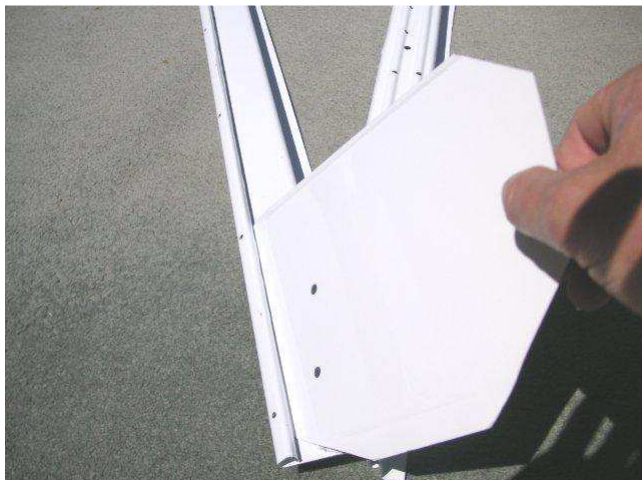

Install remaining right-side louvers. Repeat with the left side.




Attach the left and right side panels to the runners using #8-32 x 1/2" bolts and #8 nuts.





Attach left and right end pans to the flashing through holes provided in pans and flashing using the #8-32 x 1/2" bolts and #8 nuts.

The rectangular holes in the end pans should be toward the center of the awning and outside flanges should face down.

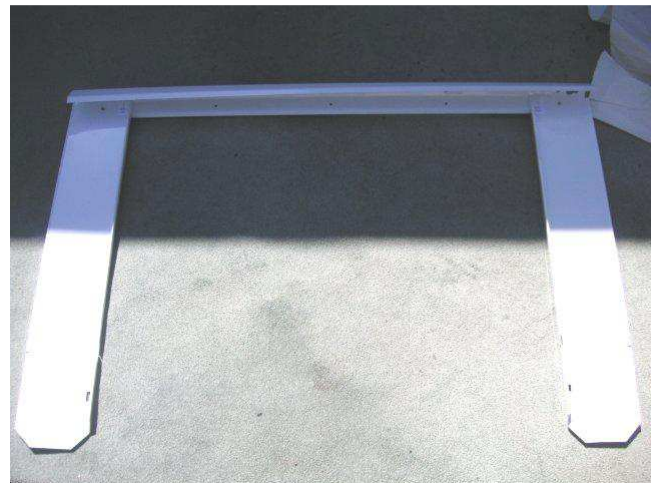

Position the end pan/flashing assembly over the louver/runner assembly and fasten with #8 x 3/4" Tek screws.



Attach the bottom pans (pans with two rectangular holes) to the flashing with #8-32 x 1/2" bolts and nuts.



Bend the valance parts down to a proper angle.



Position the apron bar behind the bottom pans and secure it temporarily with pieces of cardboard or paper to hold it in place.




Install the clips by hooking one side of the runner, compressing the runner and snapping the clip down to engage the other side of the runner.





Bend down the retainers in the four corners of every clip with pliers.

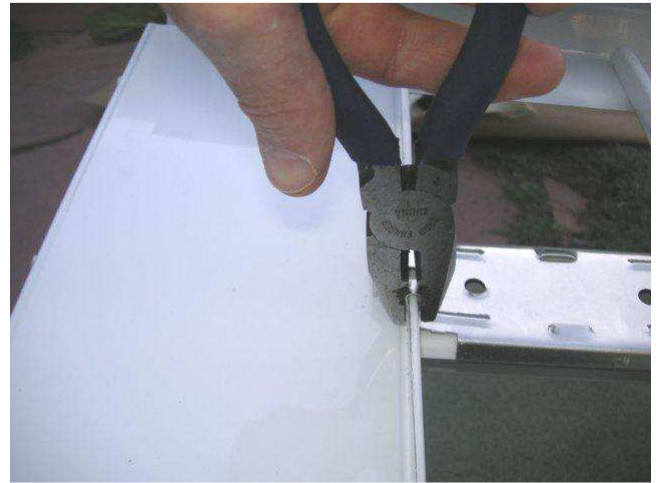

Bend down the valance parts of top covers, snap the covers over the clips and slide them back toward the flashing. (Top pans may be installed after the awning is hung.)





Hook the valance parts of the top pans to the hooks on the apron bar.



Install the wall brackets.



Assembly completed. The awning is ready to be hung.

